

Manuals for Stratus VOS Products, as of VOS 14.0.0

(Documents available from StrataDOC are marked with an asterisk.)

Table A-1. General System and User Manuals

| Part Number | Title |
|--------------|---|
| * R001-01 | Introduction to VOS |
| * R002-01 | VOS Reference Manual |
| R003-05B | Site Planning Guide |
| * R006-01 | VOS Word Processing User's Guide |
| R008-00 | VOS Hardware Reference Manual |
| R022-00 | How to Use the VOS Word Processor |
| R024-00 | Guide to the Programmable StrataBUS Interface |
| R052-01 | VOS Tape Processing User's Guide and Programmer's Reference |
| * R052-01A | VOS Tape Processing User's Guide and Programmer's Reference, w/Addendum A |
| * R073-03 | VOS System Analysis Manual |
| * R075-02 | Tape User's Quick Reference Guide |
| * R089-02 | VOS Commands User's Guide |
| * R090-00 | L306 Printer: Customer Engineer and Operator Setup Modes Guide |
| * R093-03 | VOS Emacs User's Guide |
| * R098-08 | VOS Commands Reference Manual |
| R100-00 | Product Release Bulletin: K116 and K107 I/O Adapters and Associated Tape Drives |
| R102-00 | Stratus V102 Terminal User's Guide |
| R103-00 | Stratus V102 Terminal Programmer's Guide |
| * R107-00 | Product Release Bulletin: Configuring the L306 Printer |
| * R119-08 | Software Release Bulletin: VOS Release 12.0 |
| * R119-08A | Software Release Bulletin: VOS Release 12.1 |
| * R119-08B | Software Release Bulletin: VOS Release 12.2 |
| * R119-08C | Software Release Bulletin: VOS Release 12.3.0 |
| * R119-08D | Software Release Bulletin: VOS Release 12.4 |
| * R119-09 | Software Release Bulletin: VOS Release 13.0.0 |
| * R119-09A | Software Release Bulletin: VOS Release 13.0.0a |
| * R119-09B | Software Release Bulletin: VOS Release 13.0.1 |
| * R119-09C | Software Release Bulletin: VOS Release 13.1.0 |
| * R119-09D | Software Release Bulletin: VOS Release 13.2.0 |
| * R119-09E | Software Release Bulletin: VOS Release 13.3.0 |
| * R119-09E2A | Software Release Bulletin: VOS Release 13.3.3 |
| * R119-09F | Software Release Bulletin: VOS Release 13.4.0 |
| R119-09G | Software Release Bulletin: VOS Release 13.5.0 |
| * R914-00 | Software Release Bulletin: VOS Release 14.0.0 |
| * R126-04 | VOS Module Control Panel Guide |
| * R132-03 | VOS Codes and Messages Reference Manual |
| * R153-03 | Sybase Installation Guide |
| R160-01 | Stratus PC/Connect-2 User's Guide |
| * R212-00 | National Language Support User's Guide |
| * R219-00 | Check-List Supplement for IOAs: XA2000 Model 30 |
| R221-01 | Emacs Quick Reference Card |
| * R225-01 | VOS Performance Measurement and Reporting System (PMRS) Manual |
| R227-00 | PC/Connect-2 Installation Notes |
| R228-01 | MARS Quick Reference Card |
| R229-02 | Office/2000 Administrator's Guide |
| R229-02A | Office/2000 Administrator's Guide, Addendum A |
| R231-02 | Office/2000 User's Kit |

R235-01 PC/Connect-2 Software Kit
* R239-00 Stratus V103 Terminal User's Guide
* R241-00 Product Release Bulletin:
VOS Configuration for the V103 Terminal
* R242-00 Stratus V103 Terminal Programmer's Guide
R245-01 Software Release Bulletin: WordPerfect Release 4.2
R246-00 Using WordPerfect on Stratus Systems
R247-00 Installation and Maintenance Guide:
XA2000 Model 30, I/O Adapters
* R247-00A Installation and Maintenance Guide:
XA2000 Model 30, I/O Adapters, w/Addendum A
* R248-00 Maintenance Guide: XA2000 Model 30
R248-00A Maintenance Guide: XA2000 Model 30, Addendum A
* R249-00 Control Panel Guide: XA2000 6-Slot Modules
R250-00 WordPerfect Administrator's Guide
R251-00 WordPerfect for Stratus Systems
R257-00 WordPerfect Quick Reference for Stratus Systems
R258-01 WordPerfect Quick Reference for Stratus Systems--PC
R266-00 Product Release Bulletin: XA2000 Model 30
* R273-01 MARS User's Guide and Reference
R279-00 VOS i860 Assembler Reference
* R279-00A VOS i860 Assembler Reference, w/Addendum A
R280-00 Maintenance Guide: 10-Slot Modules
* R280-00A Maintenance Guide: 10-Slot Modules, w/Addendum A
* R281-03 VOS System Administration: Administering and Customizing
a System
* R282-03 VOS System Administration: Starting Up and Shutting Down
a Module or System
* R283-03 VOS System Administration: Registration and Security
* R284-04 VOS System Administration: Disk and Tape Administration
* R285-03 VOS System Administration: Backing Up and Restoring Data
* R286-04 VOS System Administration: Administering the Spooler Facility
* R287-04 VOS System Administration: Configuring a System
R288-00 Migrating VOS Applications to Stratus i860 RISC Architecture
* R289-01 Product Configuration Bulletin: Asynchronous Devices
* R290-00 Product Configuration Bulletin: BSC Devices
* R291-00 Product Configuration Bulletin: EFT Devices
* R292-00 Product Configuration Bulletin: Link-Level Ethernet Devices
* R293-00 Product Configuration Bulletin: FTPS Devices
* R294-00 Product Configuration Bulletin: LAPB Devices
* R295-00 Product Configuration Bulletin: Poll/Select Devices
* R296-00 Product Configuration Bulletin: SDLC Devices
* R297-00 Product Configuration Bulletin: 3270 Support and 3270
Emulation Devices
* R298-00 Product Configuration Bulletin: 2780/3780/HASP Devices
* R299-00 Product Configuration Bulletin: User-Programmable Devices
* R300-00 Product Configuration Bulletin: VISA Devices
* R301-01 Product Configuration Bulletin: OSE Devices
* R302-01 Product Configuration Bulletin: TSE Devices
* R303-00 Product Configuration Bulletin: Token-Ring Devices
* R304-00 Product Configuration Bulletin: Transportation Industry
Devices
* R305-00 Product configuration Bulletin: Channel Attach Devices
* R308-03 VOS Symbolic Debugger User's Guide
* R313-00 Application Support Network (ASN) User's Guide
* R314-00 Software Release Bulletin: ASN Release 1.0
* R315-02 T401/T402 Tape Drive User's Guide
R316-00 Site Planning Guide: T401 Tape Drive
* R318-00 Product Configuration Bulletin: JASDAQ Devices

| | |
|--------------|--|
| * R319-00 | Site Planning Guide: K114 I/O Adapter |
| * R321-03 | Product Configuration Bulletin: K121 and K122 I/O Adapter and Associated Tape Drives |
| R323-00 | Maintenance Guide: 40-Slot Modules |
| * R323-00A | Maintenance Guide: 40-Slot Modules, w/Addendum A |
| * R324-01 | Installation Guide: K118 Asynchronous I/O Adapter |
| * R325-00 | Site Planning Guide: K118 I/O Adapter |
| * R326-00 | Site Planning Guide: C319 RSN Modem |
| * R334-00 | Module Control Panel Guide: Operation and Replacement |
| R336-00 | Product Release Bulletin: I101-10 Link Controller--Type A10 |
| * R337-02 | VOS Maintenance Guide: D600 Peripheral Subsystem |
| * R338-00 | Important Notes on the T402 Tape Drive |
| * R343-01 | VOS Module Maintenance Guide |
| * R345-00 | Site Planning Guide: Table-Top T203 Tape Drive |
| * R346-02 | Product Release Bulletin: XA/R 8-Slot Modules |
| R347-01 | Product Release Bulletin: XA/R 12-Slot Modules |
| * R355-00 | Product Release Bulletin: I101-11 Link Controller--Type A11 |
| R357-00 | Tape User's Preventive Maintenance Guide |
| * R357-00A | Tape User's Preventive Maintenance Guide, w/Addendum A |
| * R386-02 | VOS Installation Guide |
| * R387-00 | Module Control Panel Notice for XA2000 Models 210-280 Users |
| * R391-02 | Continuum Site Planning: 600 and 1200 Series |
| * R396-01 | Continuum Operation and Maintenance: 600 and 1200 Series |
| * R399-00 | Sybase 4.9 Release Information for Stratus Precompilers |
| * R400-01 | Oracle7 Installation Guide |
| * R401-01 | Oracle7 Administration and Tools Guide |
| * R402-00 | Product Release Bulletin: New Hardware Releases |
| * R407-00 | Migrating VOS Applications to Continuum Systems |
| * R416-04 | Software Release Bulletin: Oracle Release 7.3.2.3.1 |
| * R422-00 | Software Release Bulletin: MARS Release 5.0.1 |
| * R437-00 | VOS D600-D700 Continuum Data Migration Guide |
| * R439-00 | Product Release Bulletin: VOS Configuration for the V105 Terminal |
| * R445-00 | VOS Continuum 600 and 1200 Series with PA-8000: Operation and Maintenance Guide |
| R450-00 | MQSeries Client for Stratus VOS |
| R598-0011583 | Stratus V105 Terminal User's Guide |

Table A-2. Subroutines Manuals

| Part Numbers | Title |
|--------------|--|
| * R005-09 | VOS PL/I Subroutines Manual |
| R018-06 | VOS BASIC Subroutines Manual |
| R018-06A | VOS BASIC Subroutines Manual, Addendum A |
| * R019-08 | VOS COBOL Subroutines Manual |
| * R020-08 | VOS FORTRAN Subroutines Manual |
| * R021-08 | VOS Pascal Subroutines Manual |
| * R068-06 | VOS C Subroutines Manual |

Table A-3. Language/Programming Manuals

| Part Number | Title |
|-------------|--------------------------|
| * R009-03 | VOS PL/I Language Manual |

| | |
|-----------|--------------------------------------|
| * R010-03 | VOS COBOL Language Manual |
| R011-01 | VOS BASIC Language Manual |
| R013-00 | VOS FORTRAN Language Manual |
| * R014-01 | VOS Pascal Language Manual |
| * R040-02 | VOS C Language Manual (old compiler) |
| R041-00 | VOS C User's Guide (old compiler) |
| * R077-00 | VOS COBOL Programmer's Guide |
| * R142-00 | VOS COBOL User's Guide |
| R144-00 | VOS Pascal User's Guide |
| * R145-00 | VOS PL/I User's Guide |
| * R363-02 | VOS Standard C Reference Manual |
| * R364-02 | VOS Standard C User's Guide |

Table A-4. Communications Manuals

| Part Number | Title |
|-------------|---|
| * R007-00 | VOS Communications Software: Introduction |
| * R025-01 | VOS Communications Software: Asynchronous Communications |
| * R026-01 | VOS Communications Software: 3270 Support and 3270 Emulation |
| R027-02 | VOS Communications Software: Binary Synchronous Communications |
| * R027-02A | VOS Communications Software: Binary Synchronous Communications w/Addendum A |
| * R028-02 | VOS Communications: X.25 and X.29 Programming |
| R029-01 | VOS Communications Software: SNA Emulation |
| R041-00 | VOS Communications Software: LAPB |
| * R043-01 | VOS Communications Software: SDLC |
| R044-00 | VOS Communications Software: Poll/Select Terminal Support |
| * R051-03 | VOS Communications Software: RJE Facility |
| * R091-02 | VOS Communications Software: X.25 and StrataNET Administration |
| * R095-00 | VOS Communications Software: Multiplexed Generic Communications Software |
| R096-01 | VOS Communications Software: Defining a Terminal Type |
| * R096-01A | VOS Communications Software: Defining a Terminal Type w/Addendum A |
| * R101-00 | VOS Communications Software: MAP Administration |
| R105-00 | VOS Communications Software: SNA Device Support |
| R108-00 | VOS Communications Software: Commercial Protocol Support |
| * R109-01 | Universal Communications I/O Adapter Programming |
| R110-00 | VOS Communications Software: MAP Programming |
| R122-00 | Software Release Bulletin: MAP Release 1.1 |
| * R124-00 | Product Configuration Bulletin: X.25 T1 |
| * R128-01 | VOS Ethernet Protocol Support |
| R129-01 | VOS Communications Software: TCP/IP 2.x Programmer's Guide |
| * R130-01 | Software Release Bulletin: OS TCP/IP Release 1.0 |
| * R171-01 | VOS Communications Software: Network Configurator User's Guide |
| * R192-01 | VOS StrataLINK Administrator's Guide (VOS 11) |
| R192-02 | VOS StrataLINK Administrator's Guide |
| R193-00 | VOS Communications Software: NETBIOS Programmer's Guide |
| R193-00A | VOS Communications Software: NETBIOS Programmer's Guide, Addendum A |
| * R194-01 | Window Terminal Programmer's Guide |
| R195-00 | VOS Communications Software: Ethernet I/O Adapter Programming |
| R196-00 | VOS Communications Software: TCP/IP 2.x Administration |
| R197-00 | VOS Communications Software: TCP/IP 2.x User's Guide |
| * R199-01 | VOS Communications Software: NFS and RPC |
| R210-03 | Software Release Bulletin: TCP/IP Release 2.1 |

R213-00 VOS Communications Software: Token-Ring DLC Interface
Programmer's Guide

* R213-00A VOS Communications Software: Token-Ring DLC Interface
Programmer's Guide, w/Addendum A

* R220-01 VOS Communications Software: 3270 Channel Attach Programmer's
Guide

R222-00 VOS Communications Software: OS TCP/IP User's Guide

* R222-00A VOS Communications Software: OS TCP/IP User's Guide,
w/Addendum A

* R223-05 VOS OS TCP/IP Administrator's Guide

* R224-01 VOS Communications Software: OS TCP/IP Programmer's Manual

R236-01 VOS Communications Software: Transportation Industry Products

R237-00 Software Release Bulletin: Token-Ring DLC Interface

* R252-00 Software Release Bulletin: NFS and RPC Release 1.0

* R254-01 Software Release Bulletin: Channel Attach Subsystem
Release 1.0

R255-00 Software Release Bulletin: SLC Release 1.0

* R256-00 Window Terminal User's Guide

R275-00 VOS Communications Software: OSI Server Transport
Layer Programming

R276-00 VOS Communications Software: OSI Server Session Layer
Programming

* R306-00 VOS Communications Software: STREAMS Programmer's Guide

* R307-00 VOS Communications Software: Datakit Programming and
Administration Guide

R309-03 Network Express Operator's Guide

R310-03 Network Express Operations Utilities

R311-03 Network Express Application Programmer's Guide

R312-03 Network Express Line Handler Reference

R322-01 Network Express Upgrade Guide

R335-00 ACCESS LU7 Reference

* R351-00 VOS Communications Software: Local Area Transport (LAT)
Administrator's Guide

R359-01 ACCESS X.25 Reference

R368-00 ACCESS UTS400 Interface Guide

R369-01 ACCESS Bisync 3270 Interface Guide

R370-00 ACCESS Poll/Select Interface Guide

R371-00 ACCESS Bisync Point-to-Point/RJE Interface Guide

R372-00 ACCESS VIP7760 Interface Guide

R373-00 ACCESS SNA Interface Guide

R374-00 ACCESS ASYNC Interface Guide

R375-00 ACCESS Protocol SNA LU1 With Token-Ring Link-Layer
Support User's Guide

R376-00 ACCESS Protocol SNA LU1 With Synchronous Data Link
Control (SDLC) Link-Layer Support User's Guide

R377-00 ACCESS LU7 Device Support Design Document

R378-00 ACCESS SNA LU0 with Token-Ring Link-Layer Support User's Guide

R379-00 ACCESS SNA LU2 with Token-Ring Link-Layer Support User's Guide

R380-00 ACCESS SNA LU0 with Synchronous Data Link Control User's Guide

R381-00 ACCESS SNA LU2 Secondary Support Interface Guide

* R388-02 VOS Administrator's Guide for Open StrataLINK

* R403-00 VOS Multi-Processor Interconnect Facility (MPIF)
Administrator's and Programmer's Guide

* R408-00 Introduction to the VOS FDDI Fiber Distributed Data Interface

* R414-00 Introduction to Stratus Ethernet

* R417-00 Product Configuration Bulletin: U250 I/O Switch

Table A-5. Transaction Processing Facility (TPF) Manuals

| Part Number | Title |
|----------------|--|
| * R015-03 | VOS PL/I Transaction Processing Facility Reference Manual |
| R032-01 | VOS BASIC Transaction Processing Facility Reference Manual |
| * R034-02 | VOS COBOL Transaction Processing Facility Reference Manual |
| * R036-02 | VOS FORTRAN Transaction Processing Facility Reference Manual |
| * R038-02 | VOS Pascal Transaction Processing Facility Reference Manual |
| * R069-02 | VOS C Transaction Processing Facility Reference Manual |
| * R215-00 | VOS Transaction Processing Facility Guide |

Table A-6. Forms Management System (FMS) Manuals

| Part Number | Title |
|----------------|-------------------------------------|
| R016-02 | VOS PL/I Forms Management System |
| R033-00 | VOS BASIC Forms Management System |
| R035-01 | VOS COBOL Forms Management System |
| R037-00 | VOS FORTRAN Forms Management System |
| R039-00 | VOS Pascal Forms Management System |
| R070-01 | VOS C Forms Management System |

Table A-7. JYACC Application Manager (JAM) Manuals

| Part Number | Title |
|----------------|---|
| R238-01 | VOS JYACC Application Manager Guide |
| R244-00 | JAM DBi for ORACLE |
| R267-00 | VOS JAM C Programmer's Guide |
| R268-00 | VOS JAM COBOL Programmer's Guide |
| R269-00 | VOS JAM PL/I Programmer's Guide |
| R278-02 | Software Release Bulletin: JAM Release 5.03 |
| * R278-02A | Software Release Bulletin: JAM Release 5.03, w/Addendum A |
| R330-01 | JAM Volume I |
| R331-01 | JAM Volume II |
| R332-00 | JAM PL/I Programmer's Guide |
| R332-00A | JAM PL/I Programmer's Guide, Addendum A |
| R333-00 | JAM COBOL Programmer's Guide |
| R333-00A | JAM COBOL Programmer's Guide, Addendum A |
| * R339-00 | JAM NLS Reference |
| * R344-01 | Software Release Bulletin: JAM NLS Release 1.1 |

Table A-8. Systems Network Architecture (SNA) Manuals

| Part Number | Title |
|----------------|--|
| SC34-0757-5 | Primary and Secondary Systems Network Architecture: Planning and Operations Guide |
| SC34-0758-3 | Primary and Secondary Systems Network Architecture: Programming Guide and Reference |
| SL23-0156-3 | Communications and System Management User's Guide |

